



WARNING: the 602 Wireless intercoms are **12 DC only**. If they are to be connected to 110VAC, they must use a optional power supply and transformer. Available upon request

IMPORTANT:
 If you are connecting the 602 Wireless Intercom directly the Polaris 500/700, please follow the included Instructions.

1. Connect 0V from the 602 to "Com" on the 500/700 Board
2. Connect "12V" from the 602 to "12VDC" on the 500/700 Board
4. Connect common from the 602 to the "Com" on the 500/700
5. connect the normally open from the 602 to the ' 500/700 Control Board as follow "Exit Loop" (illustrated), It will open the gate, and and let the timer close it.

"Cycle" It will activate the gate to close or to open, depending on its present position.