

Wireless Keypad - 433

1. INTRODUCTION

Thank you for your purchase of the Transmitter Solutions wireless keypad. There is 1 step you need to do in order to use this keypad to operate your existing 433 MHz receiver:

- 1) Code setting – Set the DIP switch on the keypad so that they match the code setting of your existing 433 MHz receiver.

In this package, you should find a wireless keypad with two 3V lithium batteries.



Wireless Keypad
(Battery inside)



Please follow the detailed instructions below in order to set up the Transmitter Solutions 433 keypad to work with your existing 433 MHz receiver.

2. SETTING DIP SWITCHES

- 1a. Use a pen to set the DIP switches to match the code of your existing transmitter or receiver.

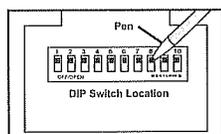


Diagram A

Examples

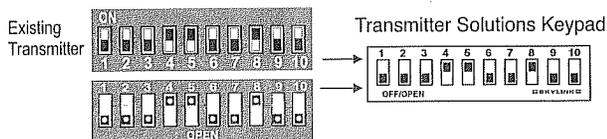


Diagram B

- 1b. Enter the current 4-digit PIN on the keypad of the pad, then press [#] to activate the garage door opener. If you have just purchased the keypad, the factory default 4-digit PIN is 0000. So please enter [0], [0], [0], [0], [#]. If the garage door does not open, reverse all of the DIP switches. The "ON" will be changed to the "OFF/OPEN" position and the "OFF/OPEN" position will be changed to the "ON" position (see diagram C).


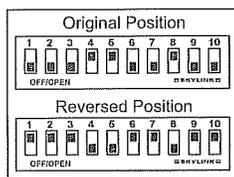


Diagram C

3. INSTALLATION

- Position the keypad on the garage door frame.
- Lift up the cover and insert the long screw above the keypad in the slot provided (a).
- Remove the battery cover and insert the second long screw in the lower slot (b).
- Replace the battery cover and insert short screw (c).

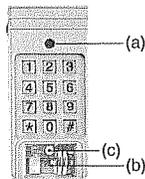

4. KEYPAD OPERATION

NOTE:

The backlight comes on and a beep is emitted when any key is pressed. The backlight of the keypad may not be visible when it is too bright outside. When any key is pressed, the next key must be pressed within 5 sec. or the backlight turns off and the sequence is canceled. You must begin again.

4. KEYPAD OPERATION (cont.)

If the keypad does not emit a beep when pressed, wait a few seconds and press the key again. If you hear a beep, the keypad has accepted that key.

- To change you PIN:

1. Enter the current PIN (originally set at 0 0 0 0), press *,
2. Enter new 4 digit PIN, press *,
3. Enter new PIN again, press *.



For example, if you are changing the PIN number from 0000 to 1234, enter the following sequence: 0000, *, 1234, *, 1234, *.
If confirmed, the backlit LED flashes and the unit emits a long beep.

- Operation

To open or close garage door, press your four digit PIN and the [#] key. If confirmed, the keypad will emit three beeps. If you do not hear 3 beeps after the 4-digit PIN and [#] is entered that means you have entered an incorrect PIN, and the keypad will not operate your garage door.

5. BATTERY

Two 3 volt Lithium type (CR2032) batteries (included).

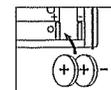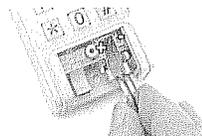

Battery compartment

It is time to change the batteries when the backlight no longer appears.

6. WARNING

If this transmitter triggers other garage doors in your neighborhood, change all your transmitters and receivers to a new code setting.

DO NOT let children use the keypad without adult supervision.

7. FCC

The Garage Door Keypad is approved by the FCC and it complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference that may cause undesired operation.

8. WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization are required.

9. CUSTOMER SERVICE

If you have difficulty getting your remote control to work or would like to contact Customer Service, please:

1. visit our website at www.transmittersolutions.com
2. email us at support@transmittersolutions.com, or
3. call our toll free number (below) Monday through Friday, 9 a.m. to 5 p.m. MST.
4. send a fax to the number shown below.



2505 Chandler Avenue, Suite 1 • Las Vegas, NV 89120
(866) 975-0101 • (866) 975-0404 Fax

Here is the procedure of how to reset the password on the keypad:

1. Take out the batteries from the unit.
2. Open up the back cover (where you can change the DIP switch setting).
3. You should see a jumper (marked 1 2 3) with a connector placed in horizontal position, move the connector from left 2 posts (1-2) to the right 2 posts (2-3).
4. Apply the batteries to the unit again.
5. Press [7654#] on the keypad, it should have 2 beeps to confirm. *** **Note: This step must be done Within one second or less or it won't accept the change. If you didn't get the 2 beeps, start over.**
6. Then remove the connector back to the original position.
7. Wait for 2 hours and do not touch the keypad. After 2 hours, the password will be back to 0000.

Note: When you place the connector to the right posts, this will consume higher current, so only leave this jumper at the right posts for the min. time. If you leave the connector here for long enough time, it will drain the battery. Be careful.

Keypad Operation:

1. To operate the keypad, enter the current PIN, (default set at 0 0 0 0), press #. If confirmed, the keypad will emit 3 beeps.
2. To change your PIN in the keypad. Enter the current PIN, (default set at 0 0 0 0), press * , enter new 4 digit PIN, press * , enter new PIN again, press * . For example, If you are changing the PIN number from 0 0 0 0 to 1 2 3 4, enter the following sequence, 0 0 0 0, * 1 2 3 4, * 1 2 3 4, * . If confirmed, the backlit LED flashes and the keypad emits a long beep.