



WARNING: the 602 Wireless intercoms are **12 DC only**. If they are to be connected to **110VAC**, they must use a **optional power supply and transformer**. Available upon request **IMPORTANT:**

If you are connecting the 602 Wireless Intercom directly the Polaris 500/700, please follow the included Instructions.

1. Connect 0V from the 602 to "Com" on the 500/700 Board
 2. Connect "12V" from the 602 to "12VDC" on the 500/700 Board
 4. Connect common from the 602 to the "Com" on the 500/700
 5. connect the normally open from the 602 to the ' 500/700 Control Board as follow "Exit Loop" (illustrated), It will open the gate, and and let the timer close it.
- "Cycle" It will activate the gate to close or to open, depending on its present position.